


# YD25 INSTALLATION


Before installation begins, please take note of the following;

- Four 10G x 1" Csk. Self tapping screws are supplied for fitting the lock and strike plate. They are the suitable for mounting in both aluminum and wooden doors and frames.
- Ensure that a suitable power supply is used and that the power cables are of a sufficient gauge to eliminate any voltage drop at the lock.
- Do not fit the lock into a floor cavity firing upwards.
- Do not fit the lock in a 'wet environment' as evidence of water damage may void the warranty.
- Do not lubricate the lock. It has been lubricated when assembled and additional lubrication will void the warranty.

You will find the following items inside the box

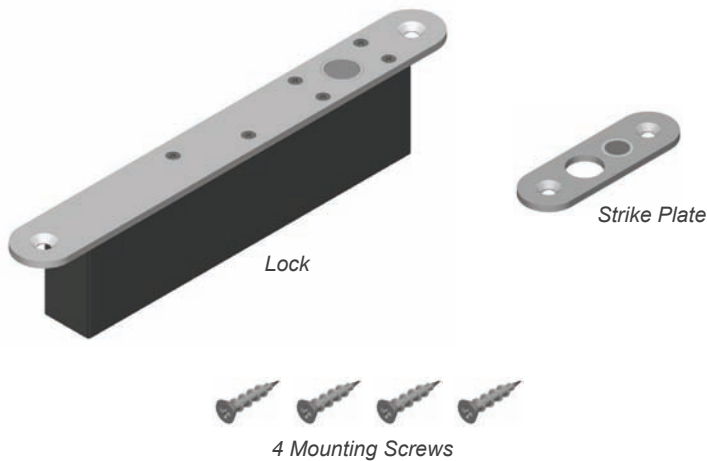


## 1 CUTTING MORTICES

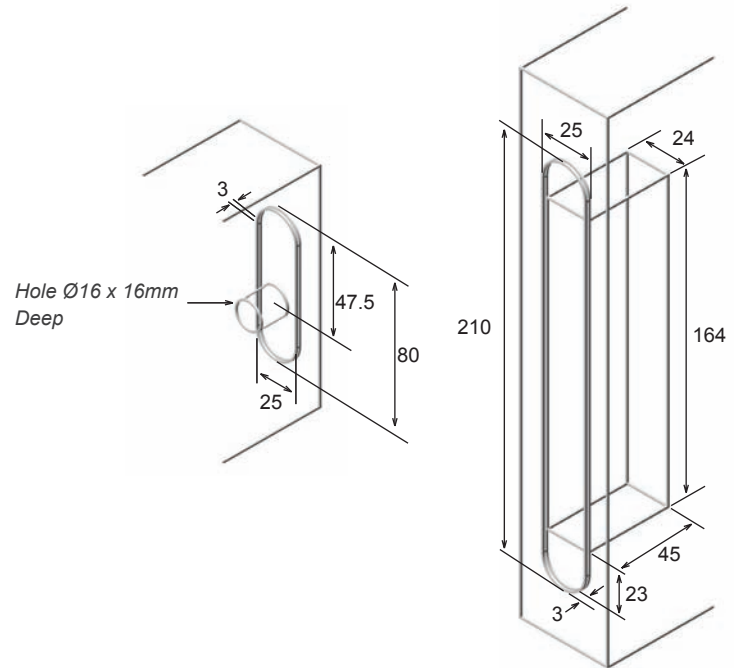

\* All dimensions in mm


Cut mortices into the door and door frame for the strike plate and lock as per the dimensions shown. The top end of the strike plate must be aligned with the top of the lock so the bolt pin goes centrally into the hole in the strike plate. This also results in the correct alignment of the  $\text{M}$  on the lock face plate with the magnet fitted into the strike plate. The gap between the lock face plate and strike plate must not exceed 6mm when the door is closed.

## 2 WIRING THE LOCK

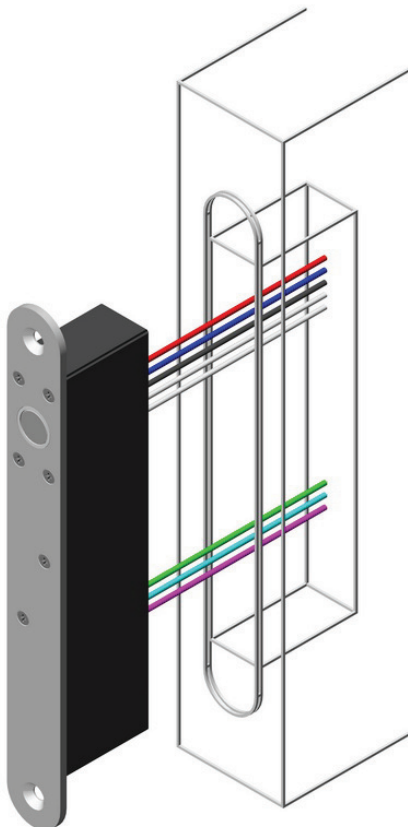

The wiring options and details are shown overleaf. Once the desired wiring method is chosen run the wires into the rear of the mortice and connect to the lock. There are screw terminals for each wire and a connector guide is shown on the lock cover.

## 3 FITTING THE LOCK AND STRIKE PLATE

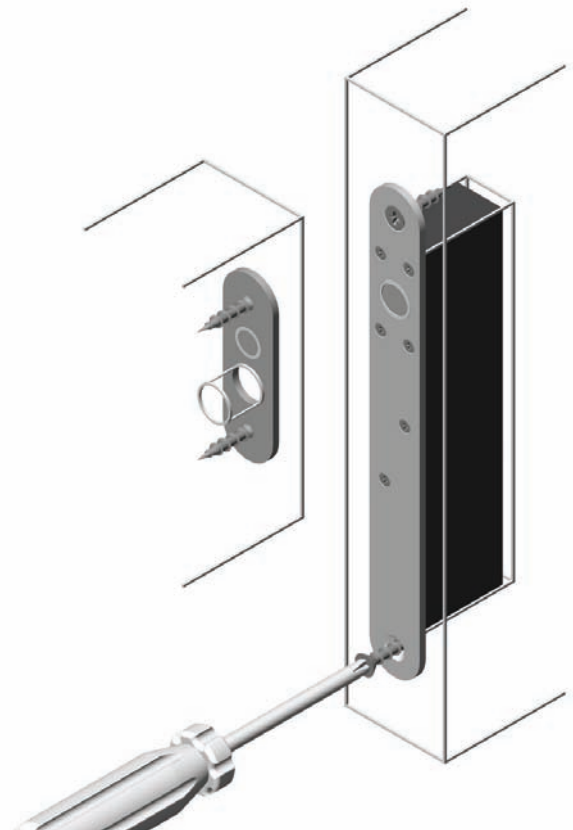


Slide the lock back into the mortice, making sure that the wiring integrity is maintained. Secure the lock and strike plate in place, using the supplied mounting screws. Ensure that the hole behind the strike plate is free from swarf and is deep enough to allow the lock pin to fully extend when locked.

# YD25 INSTALLATION

## WIRING OPTIONS AND DETAILS

To utilize all available features the lock is fitted with eight connectors. Three are for power and control and five for monitors that provide bolt pin and door position information. The lock can be operated in two different modes; fully functioned **three wire mode** and reduced function **two wire mode**.

In addition to running the necessary wires for the desired mode, positioning of the jumper that is located on the lock printed circuit board determines the operation. The default jumper setting is the three wire mode and is factory set.

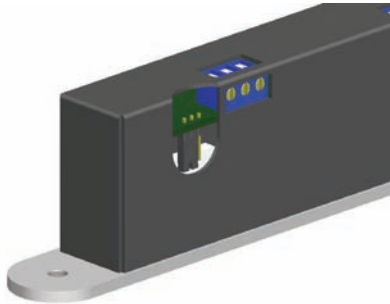

The jumper is found by removing the cover and the only time it will need to be repositioned is when operating a fail safe lock in the two wire mode.

FEATURES	3 WIRE MODE	2 WIRE MODE
Multiple re-lock (fail safe)	Yes 9x	Yes 5x
Multiple unlock (fail secure)	Yes 5x	Yes 5x
9 second unlock delay	Yes	Yes
Auto re-lock	Yes	Fail safe only
Anti tailgate	Yes	No
Anti Tamper	Yes	Yes
Jumper position Fail Safe		
Jumper position Fail Secure		


## THREE WIRE MODE

The three wire mode requires a continuous connection of power to terminals 1 (+ve) and 3 (-ve). The lock is unlocked by the application of power between terminals 1 (+ve) and 2 (CL). Wiring the lock for fail safe or fail secure configuration is identical.

**Fail safe operation;** momentarily connecting '1' to '2' unlocks the door for a period of 9 seconds. After the 9 seconds has elapsed if the door has not been opened the YD25 automatically locks again. If the door has opened and closed within the 9 second window (which is the case in normal operation) the unlock delay is overridden and automatic relocking occurs as soon as the door is closed. On closing, full power is applied to the YD25 9 times in 15 seconds before the current is reduced and lock goes into a holding mode to minimize heating and power consumption.

**Fail secure operation;** momentarily connecting '1' to '2' unlocks the door and over a 9 second period full power is applied to the lock 5 times. If the door remains closed, after 9 seconds has elapsed the YD25 automatically locks again. If the door has opened within the 9 second window (which is the case in normal operation) the YD25 will remain unlocked and in a holding mode until the door is closed again and automatic re-locking occurs.

In either fail safe or fail secure configuration, maintained connection of '1' to '2' will keep the YD25 unlocked regardless of door position.

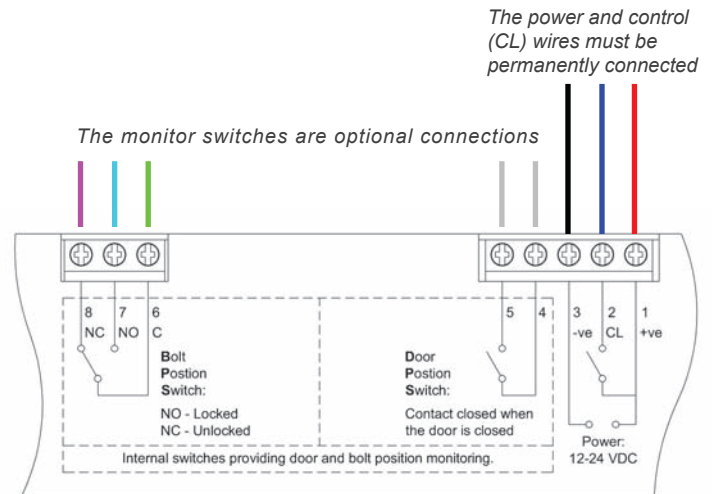

## TWO WIRE MODE

The two wire mode differs between fail safe and fail secure but both require a switched supply connected to terminals '1' and '3'. In addition, for fail safe configuration the jumper needs to be repositioned as shown above.

**Fail safe operation;** a link is connected between terminals '2' and '4' and also between '1' and '5'. The lock will remain unlocked with power switched off. With power applied, and with the strike plate correctly aligned, the YD25 locks. As long as the door is open the YD25 will remain unlocked.

**Fail secure operation;** a link is connected between terminals '1' and '2'. The YD25 will be locked when no power is applied and will unlock when power is applied. The operation remains the same regardless of door or strike plate position.

